


Corin mod. 2600 - 02/12


D-LINE

Assembling instructions
Notices de pose
Istruzioni di montaggio
Montage voorschrift





2600




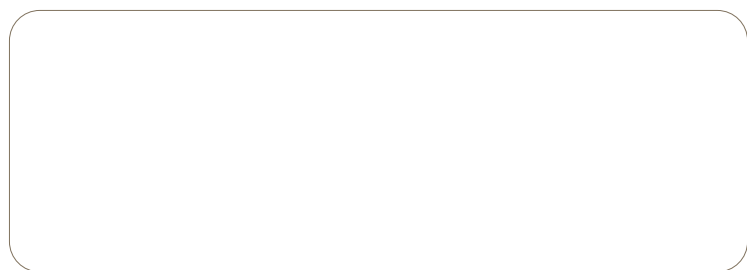






Corin




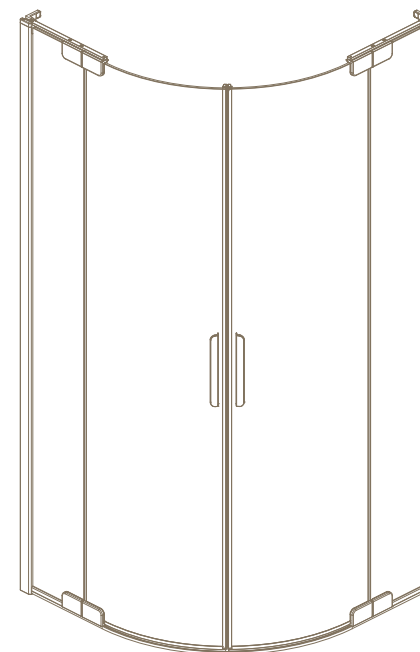


Corin

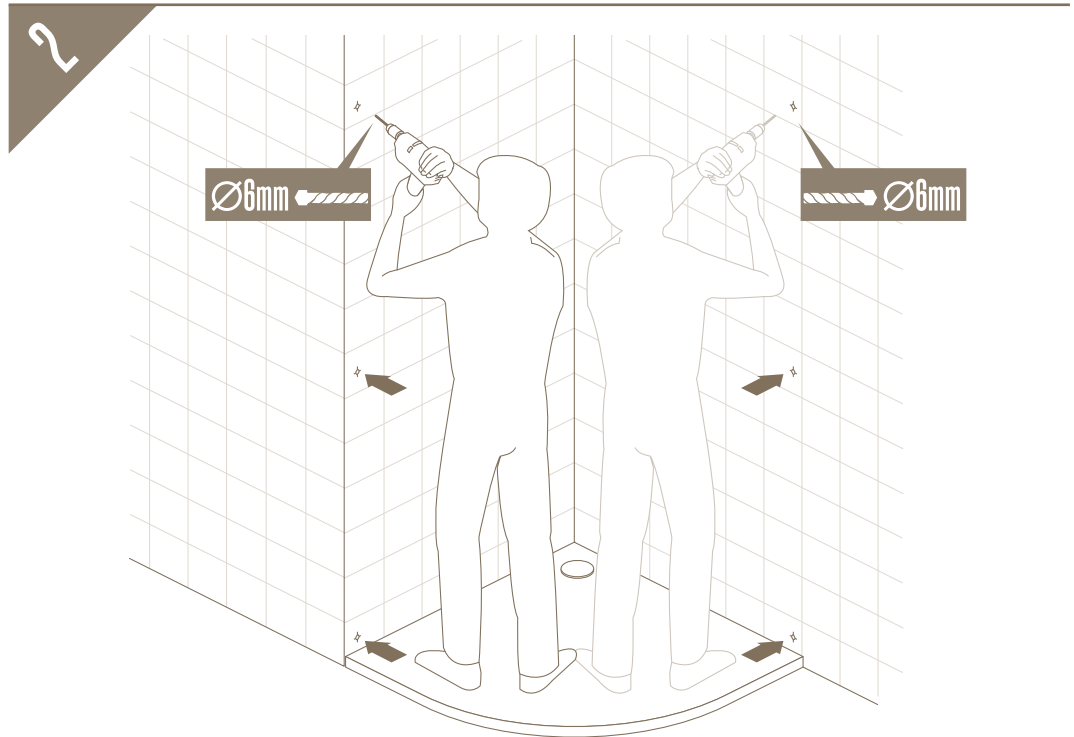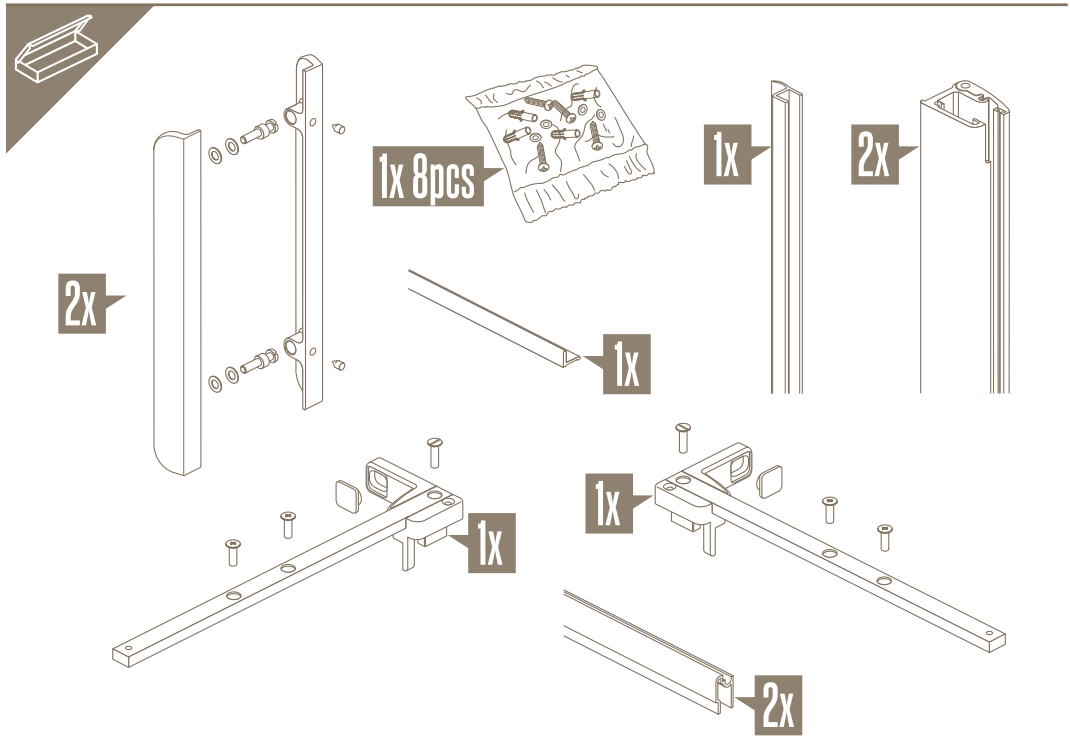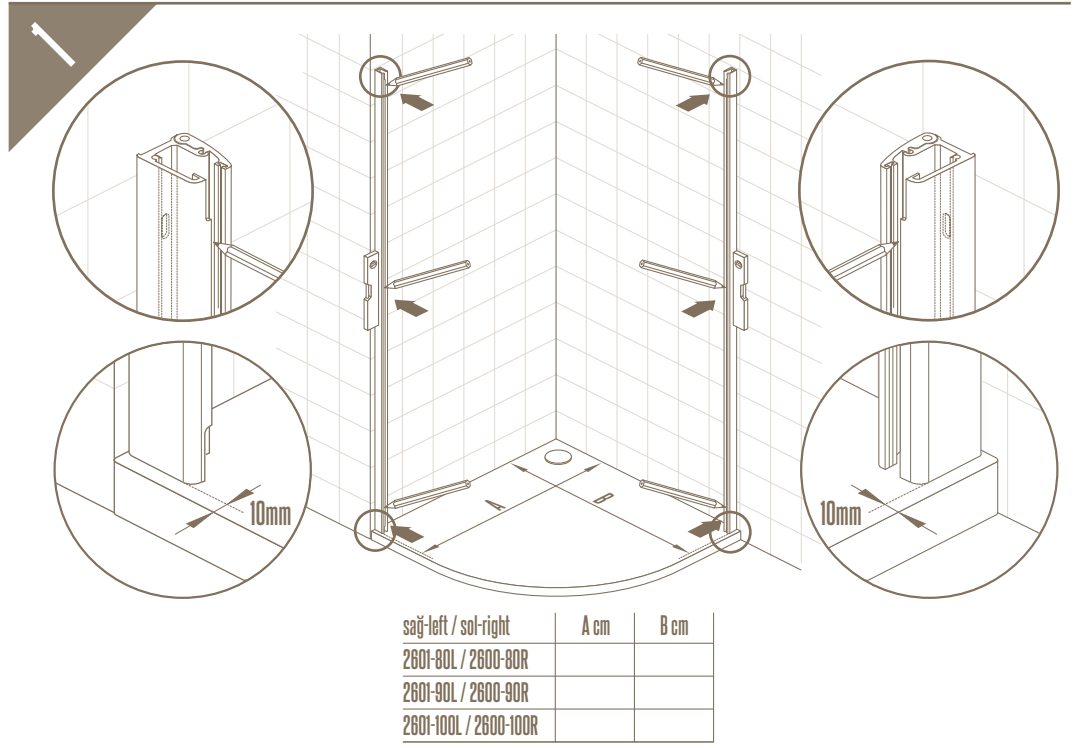
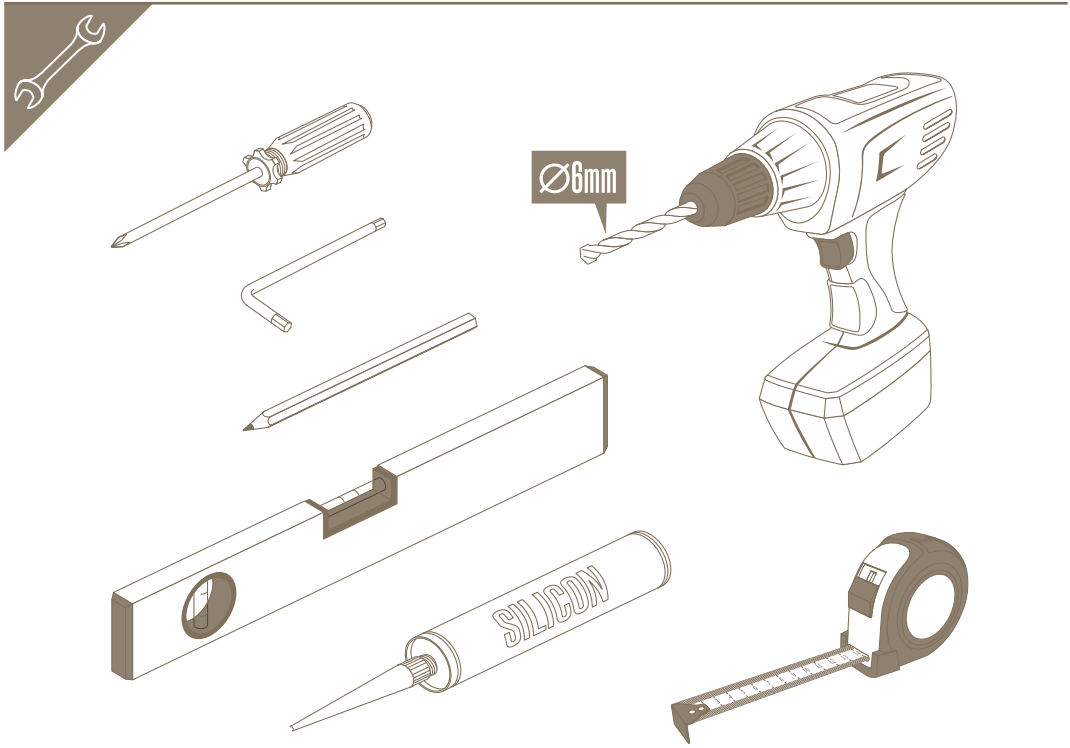


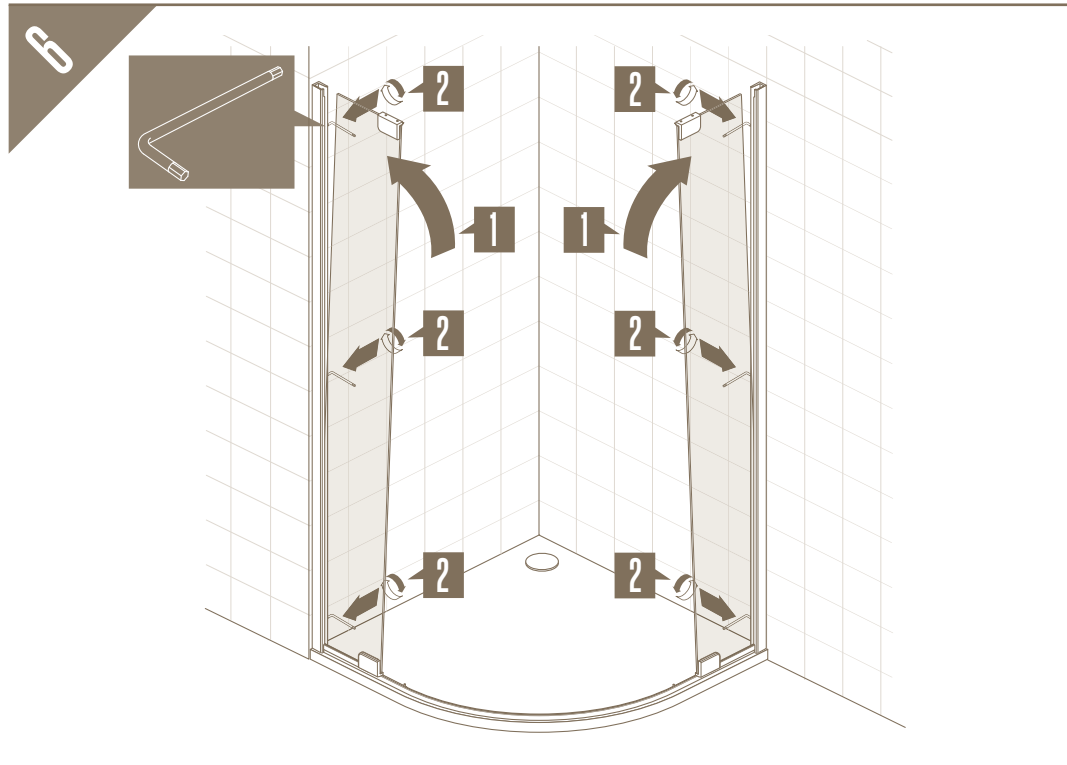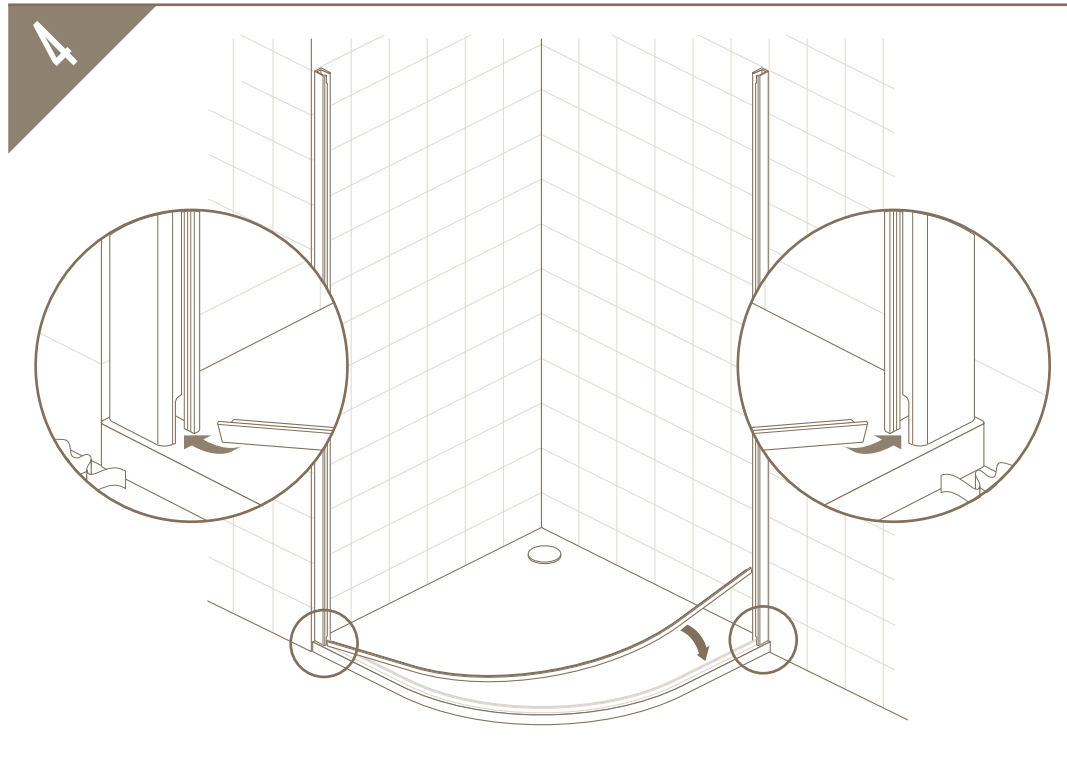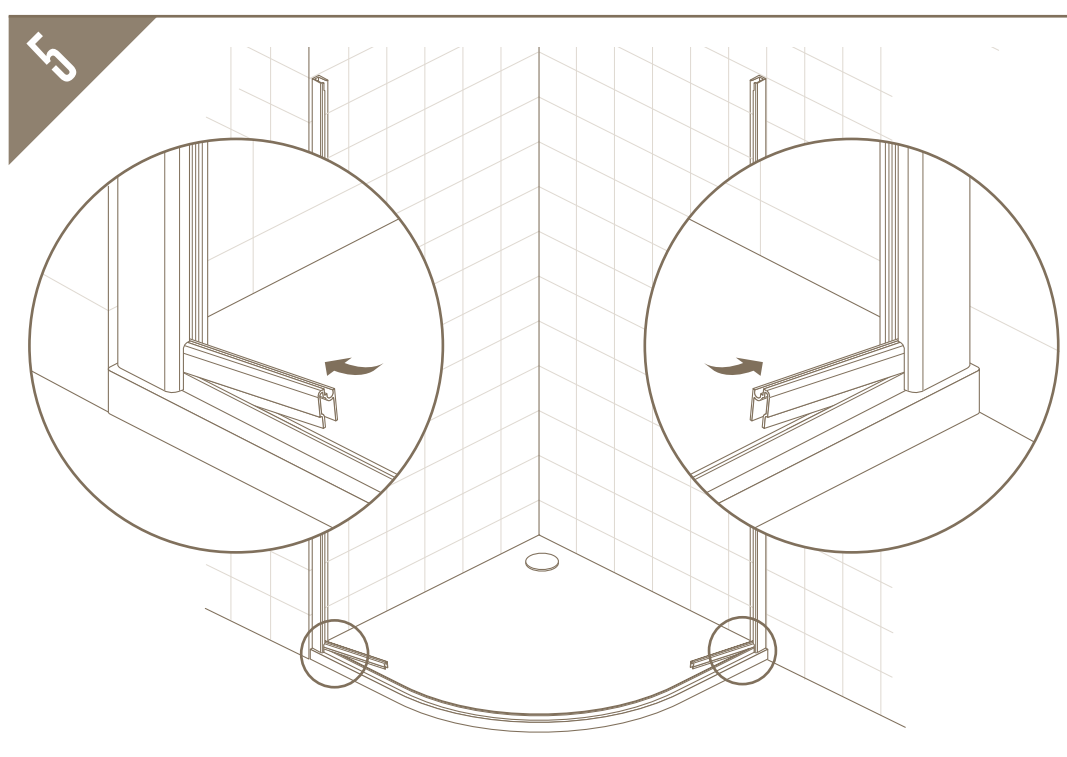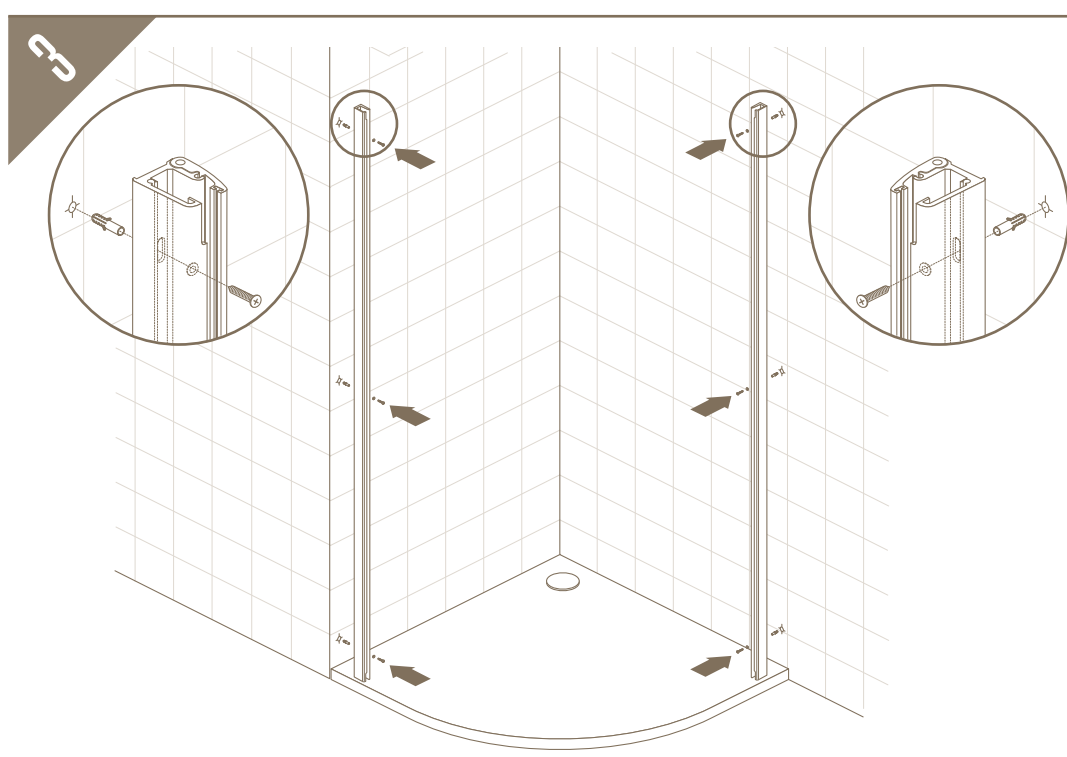

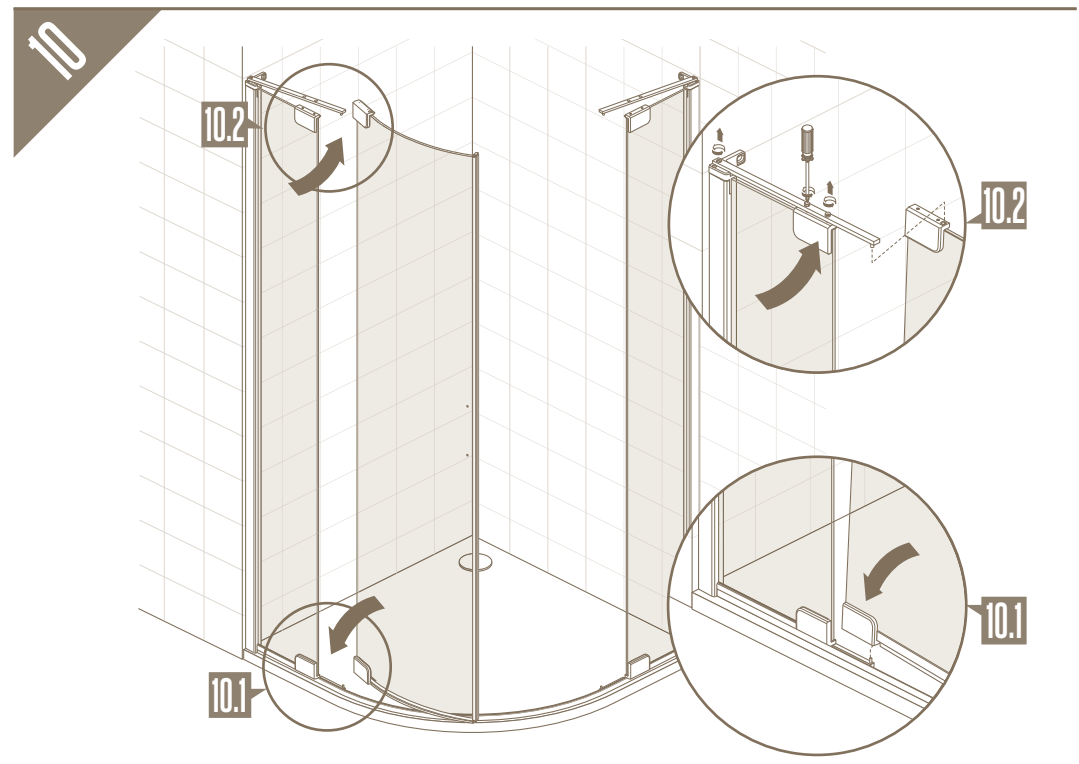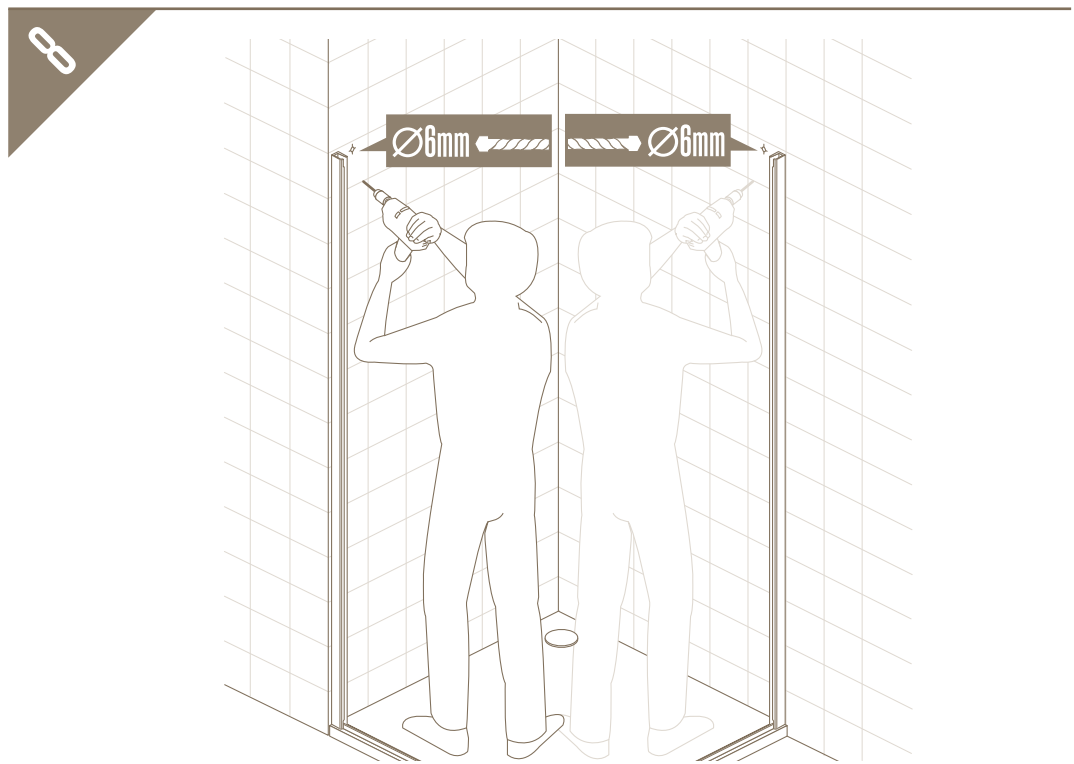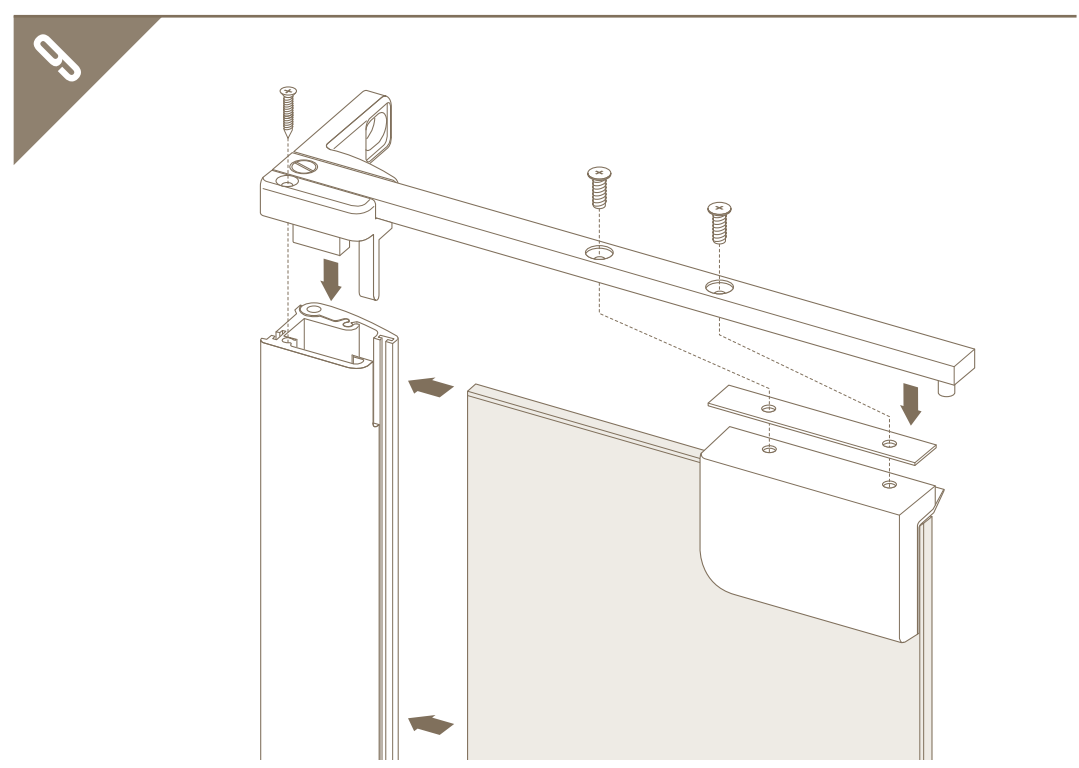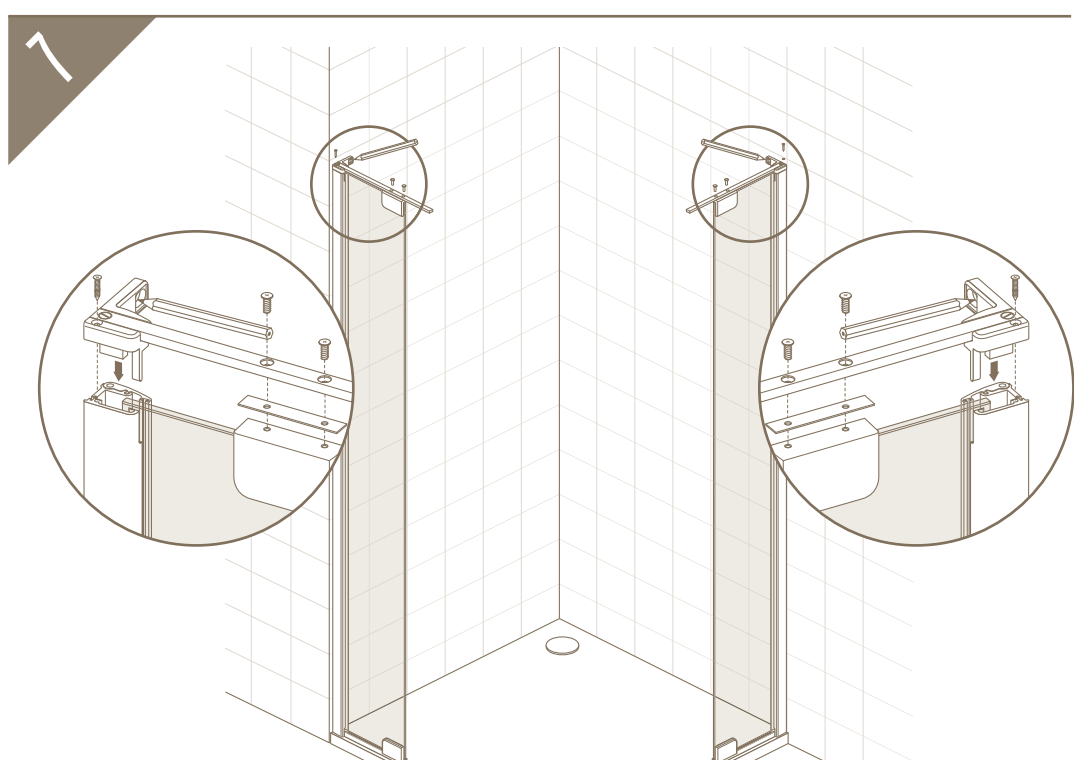

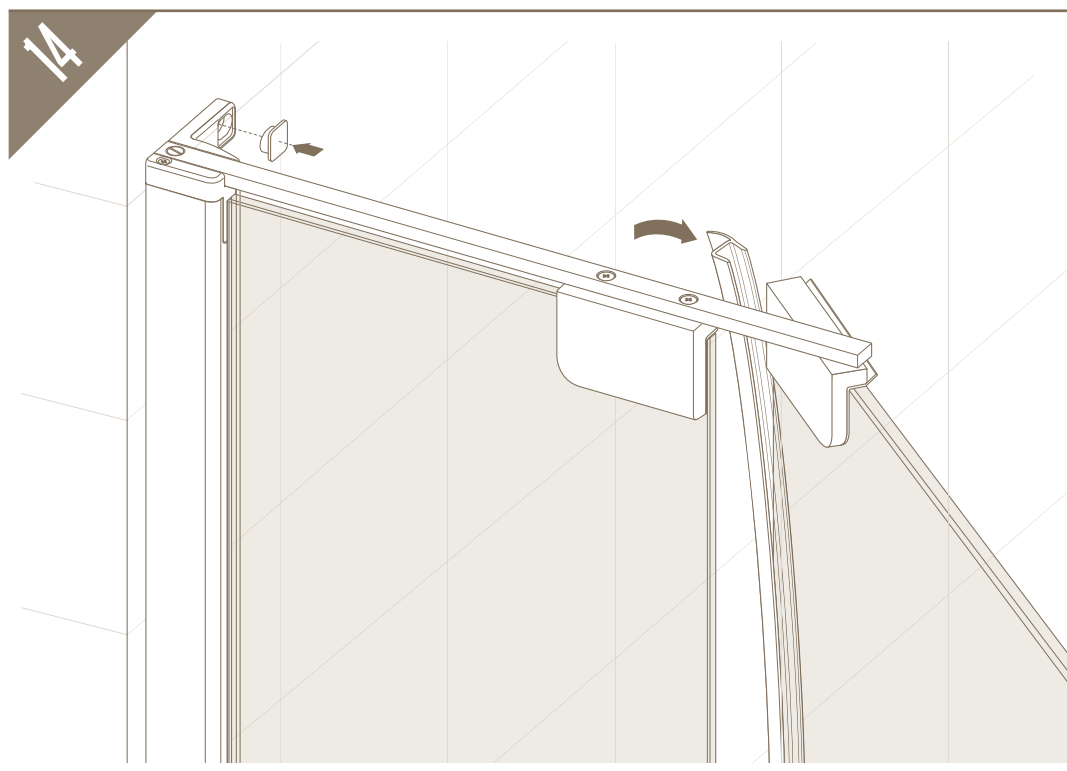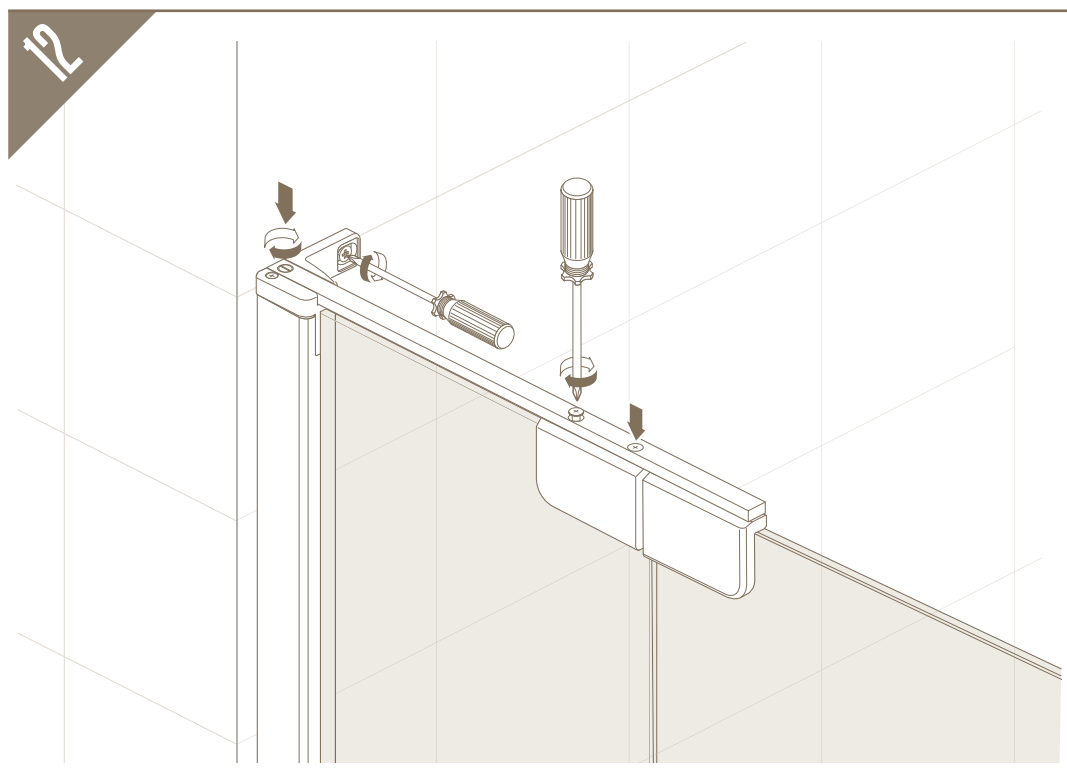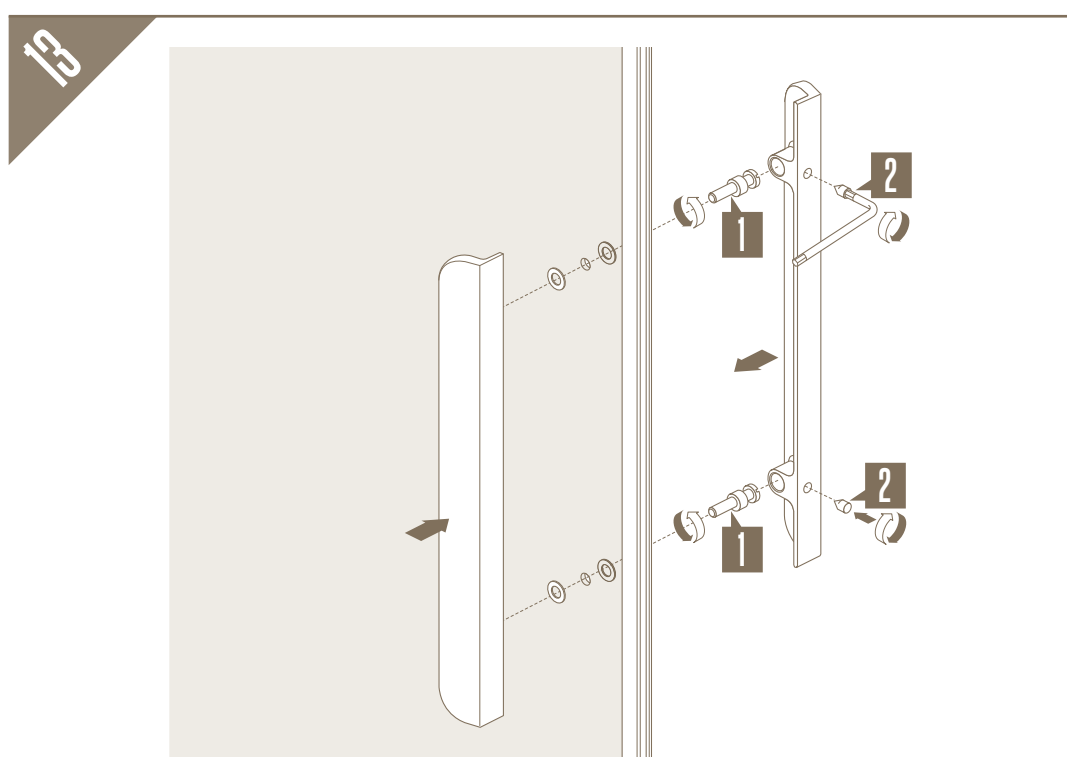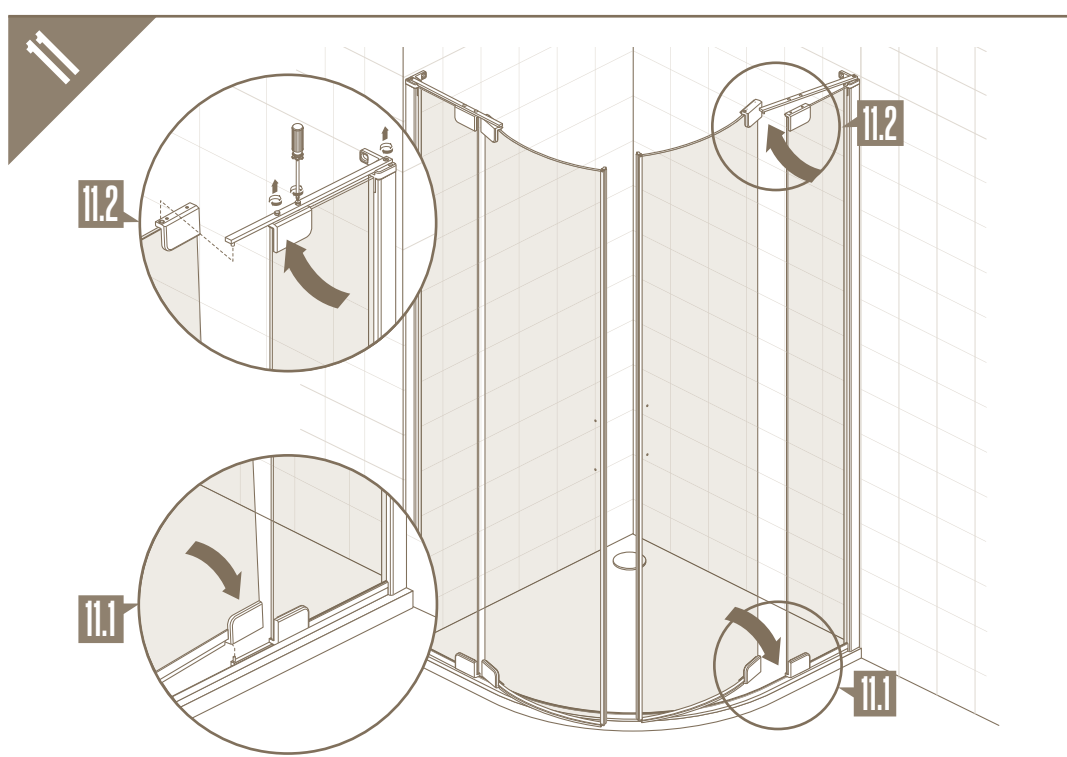

15

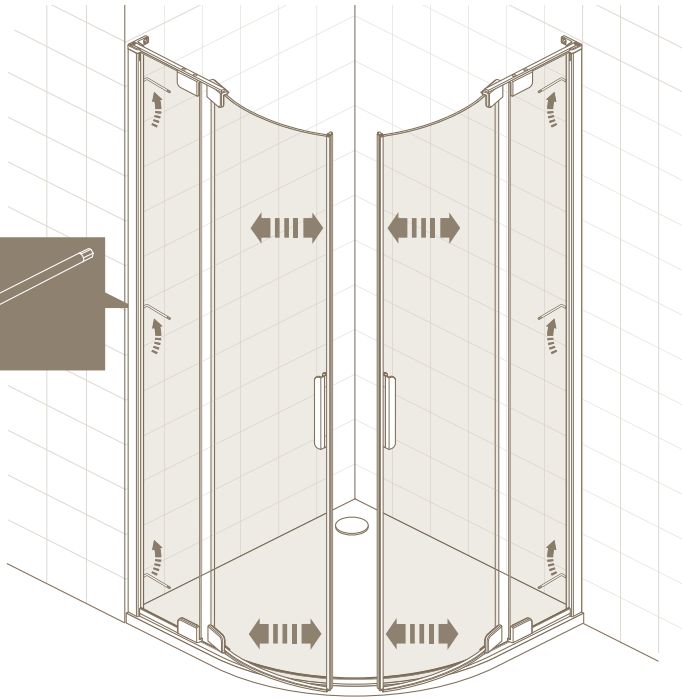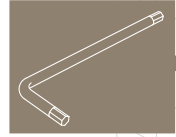

16



Attenzione
Siliconare solo all'esterno
Attention
Siliconer seulement a l'exterieur
Attention
Seal only outside
Attentie
Alleen aan buitenzijde afkitten
Achtung
Silikon nur auf der aussenseite
Atención
Siliconar solo por el exterior

