


Corin mod. 2900/2901 - 02/12


D-LINE

Assembling instructions
Notices de pose
Istruzioni di montaggio
Montage voorschrift





2900-2901




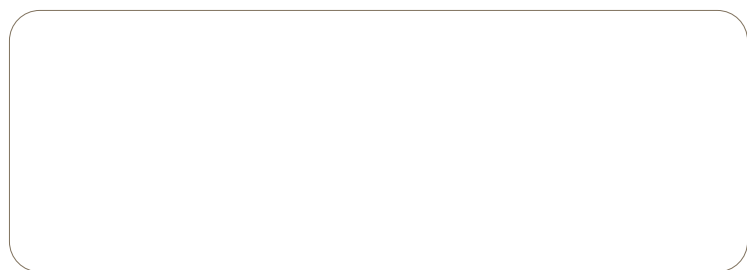






Corin

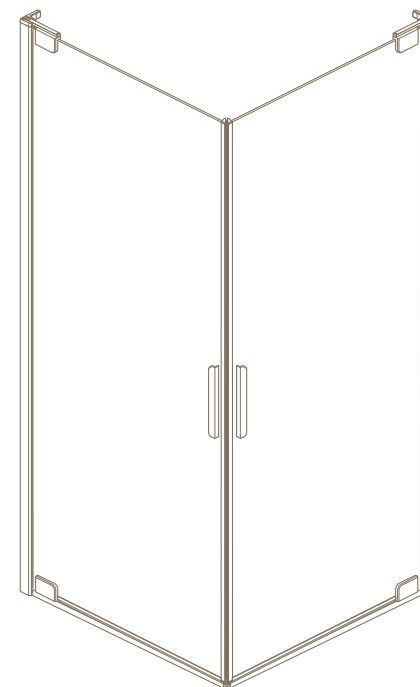


Corin

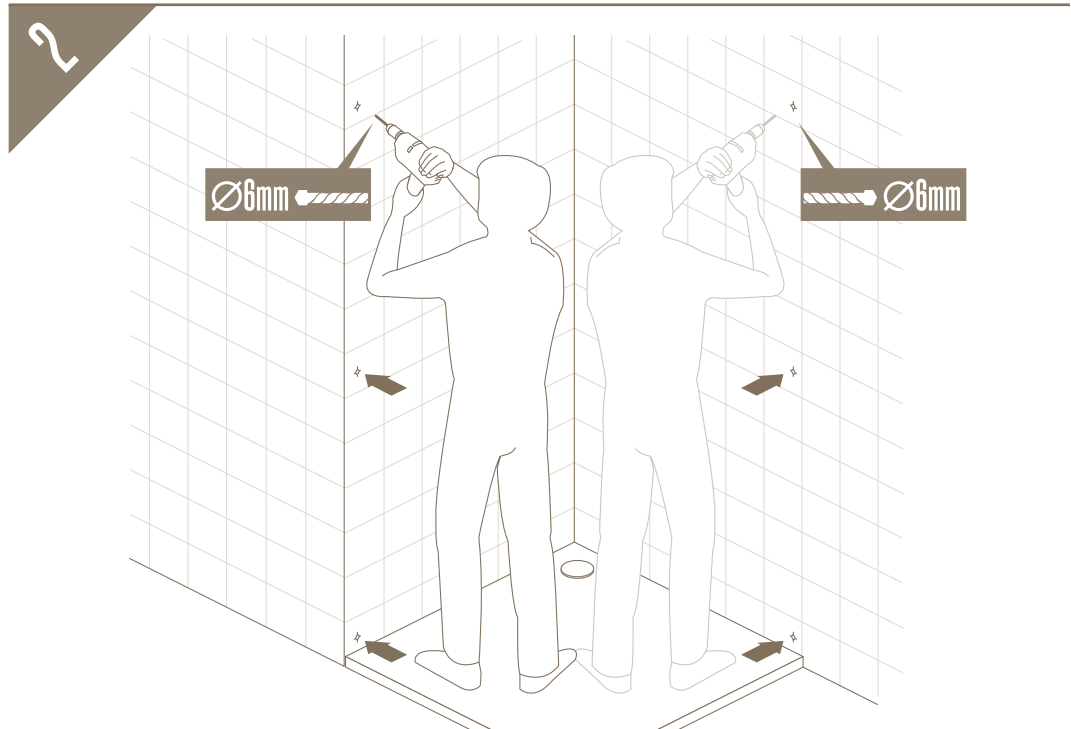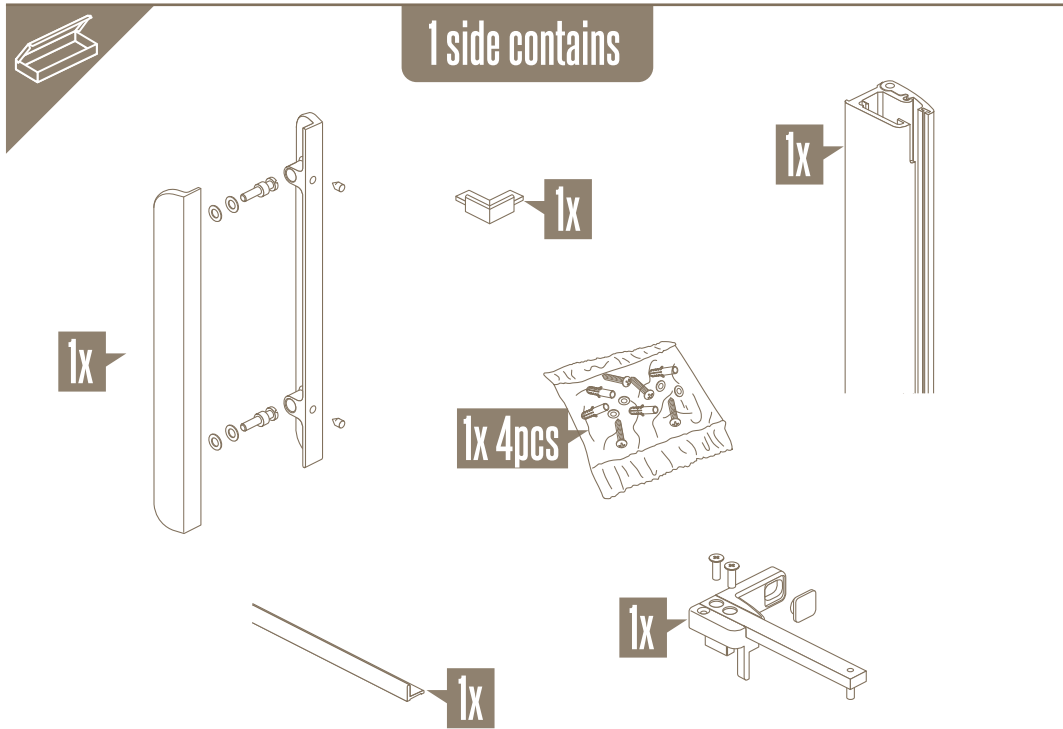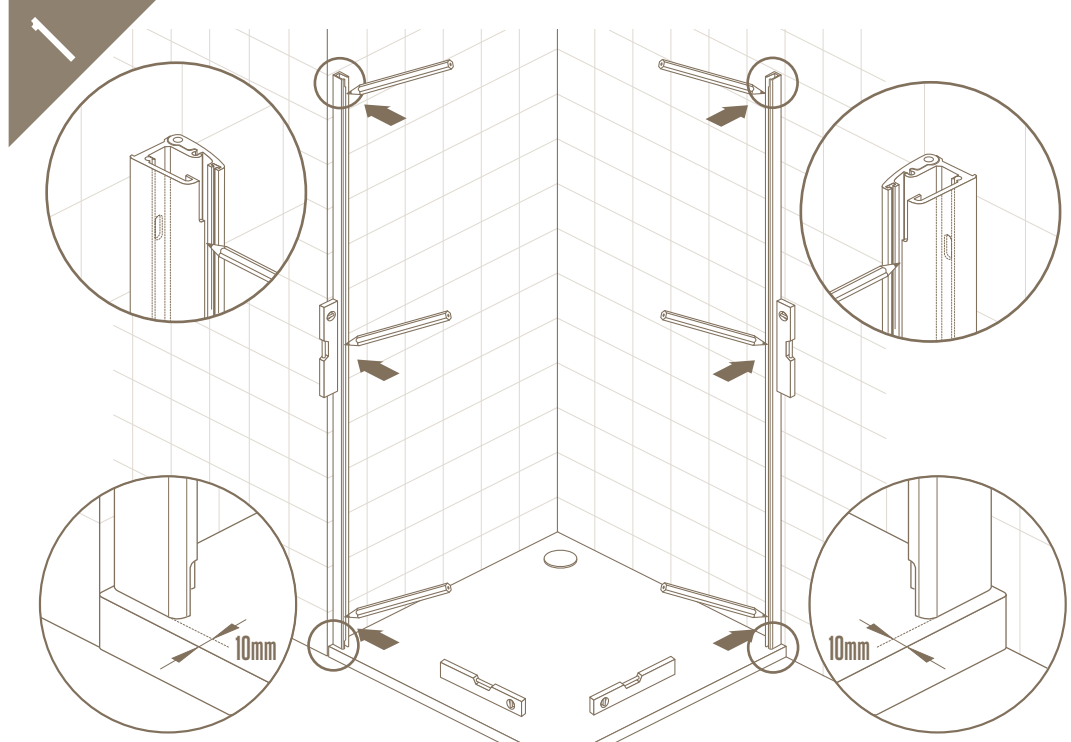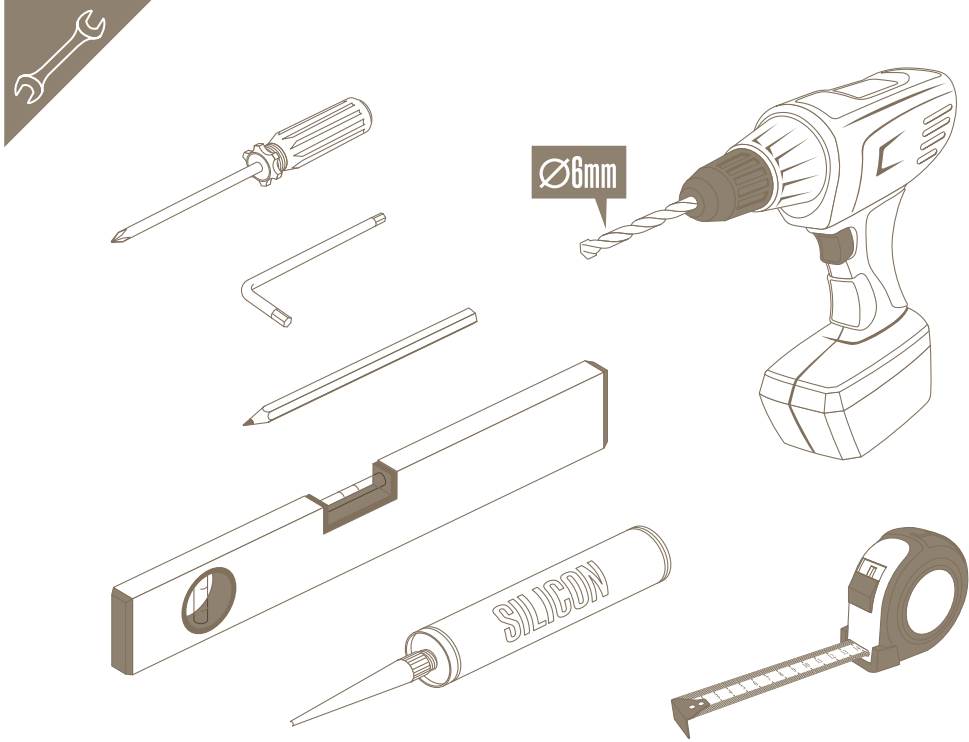

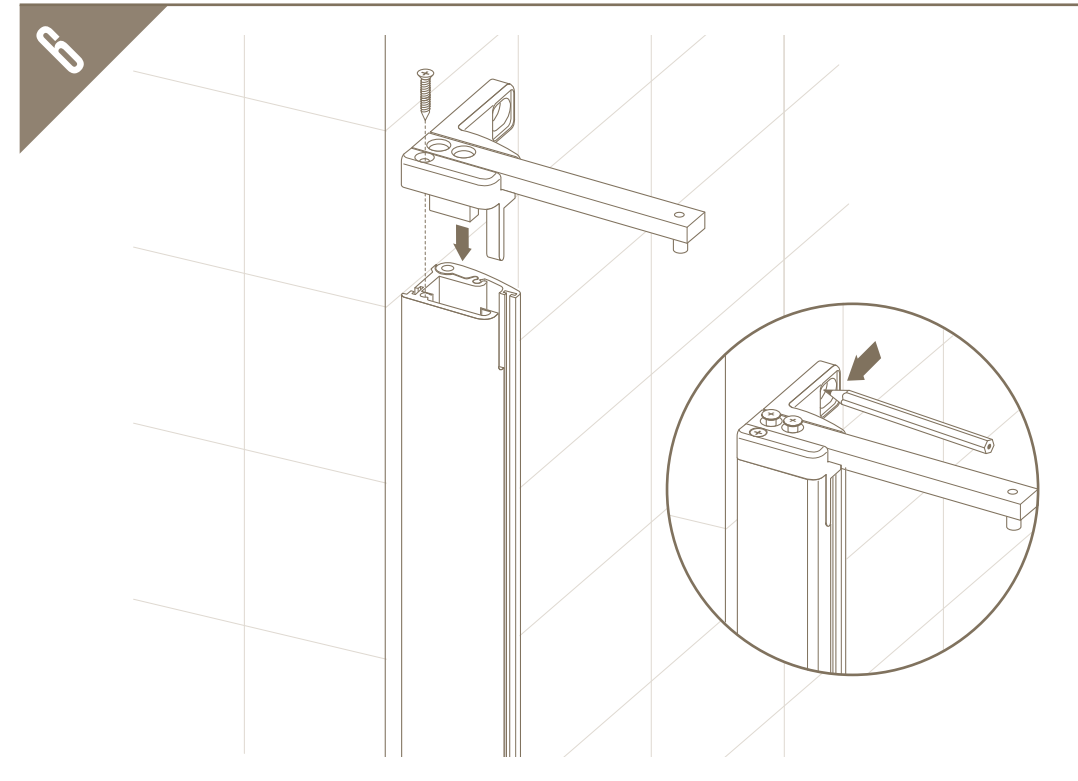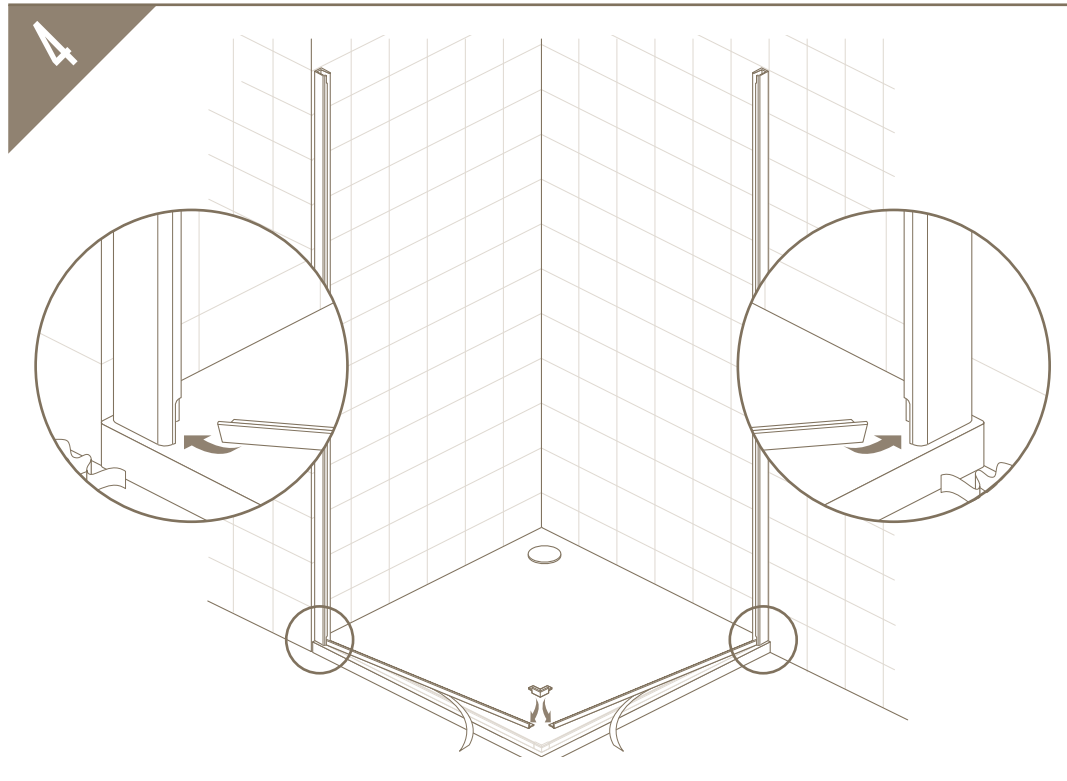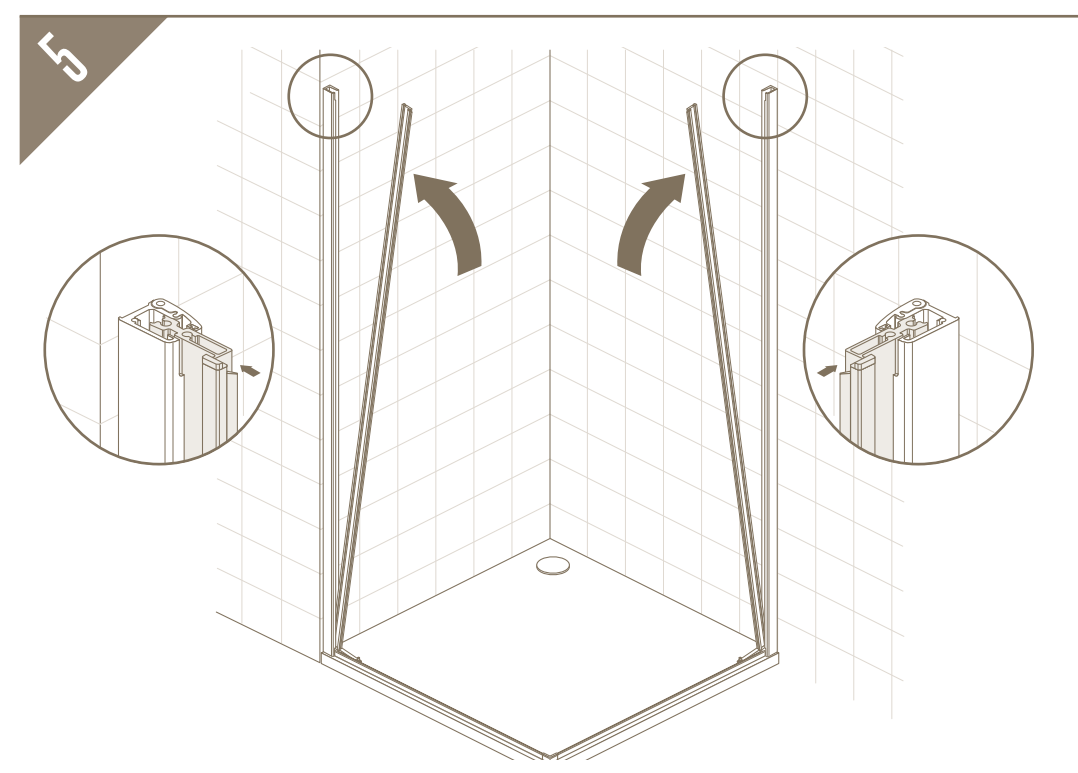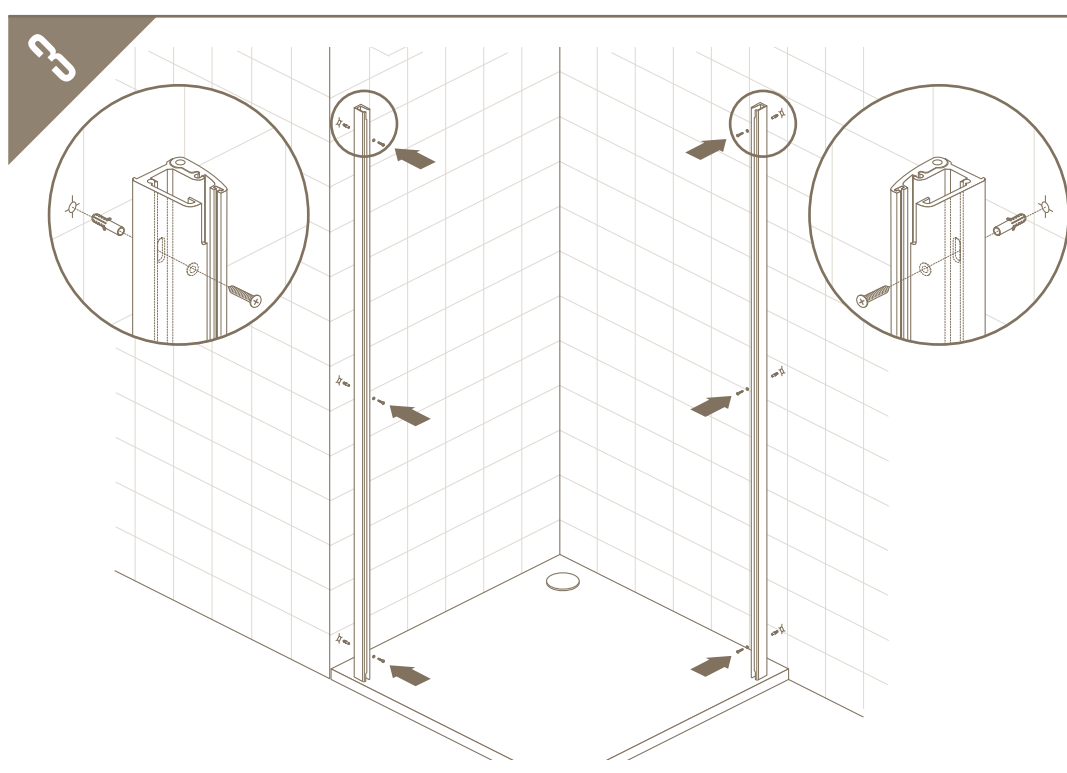


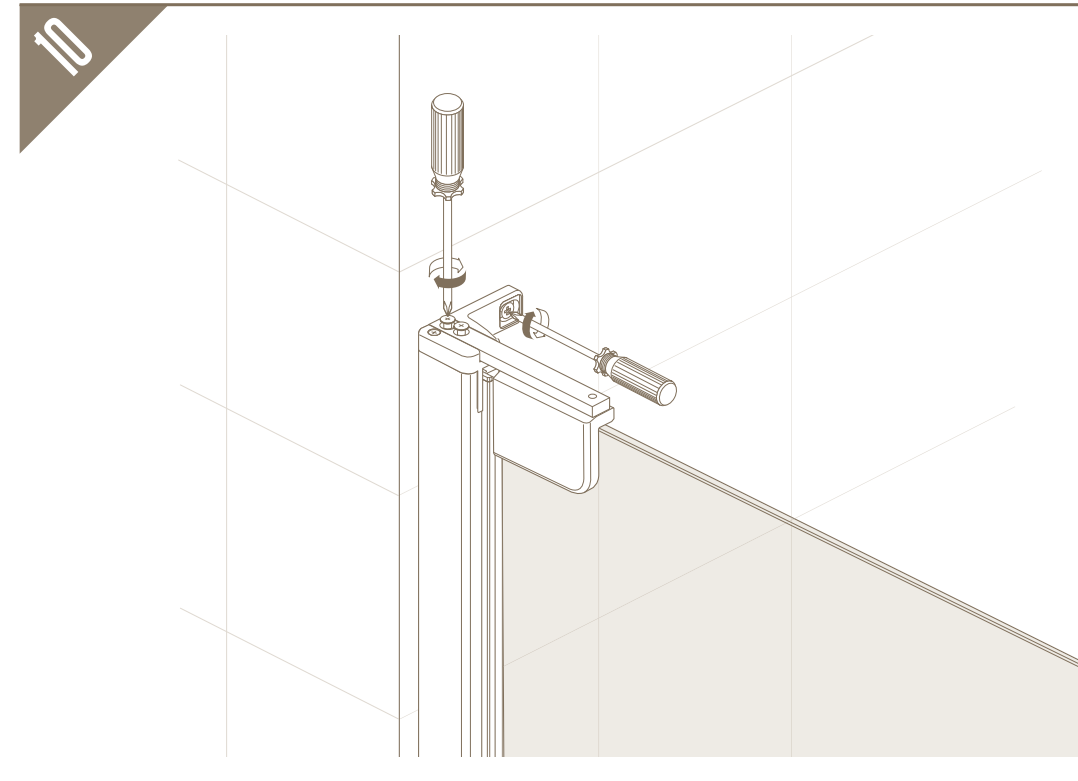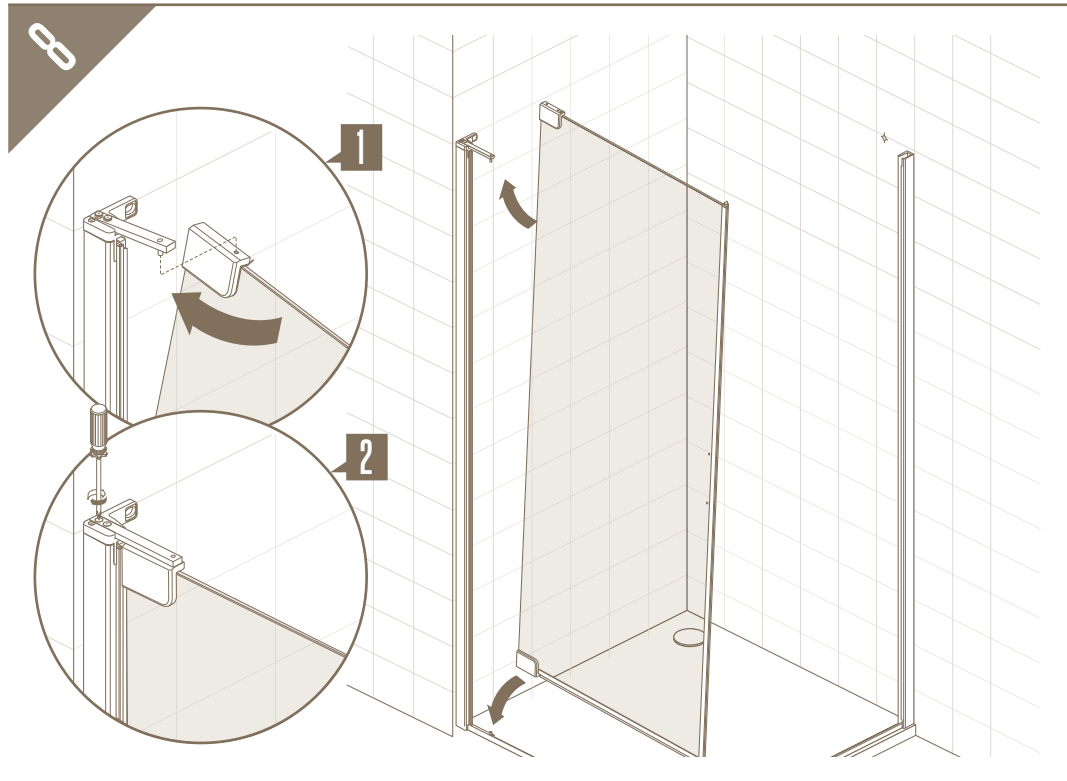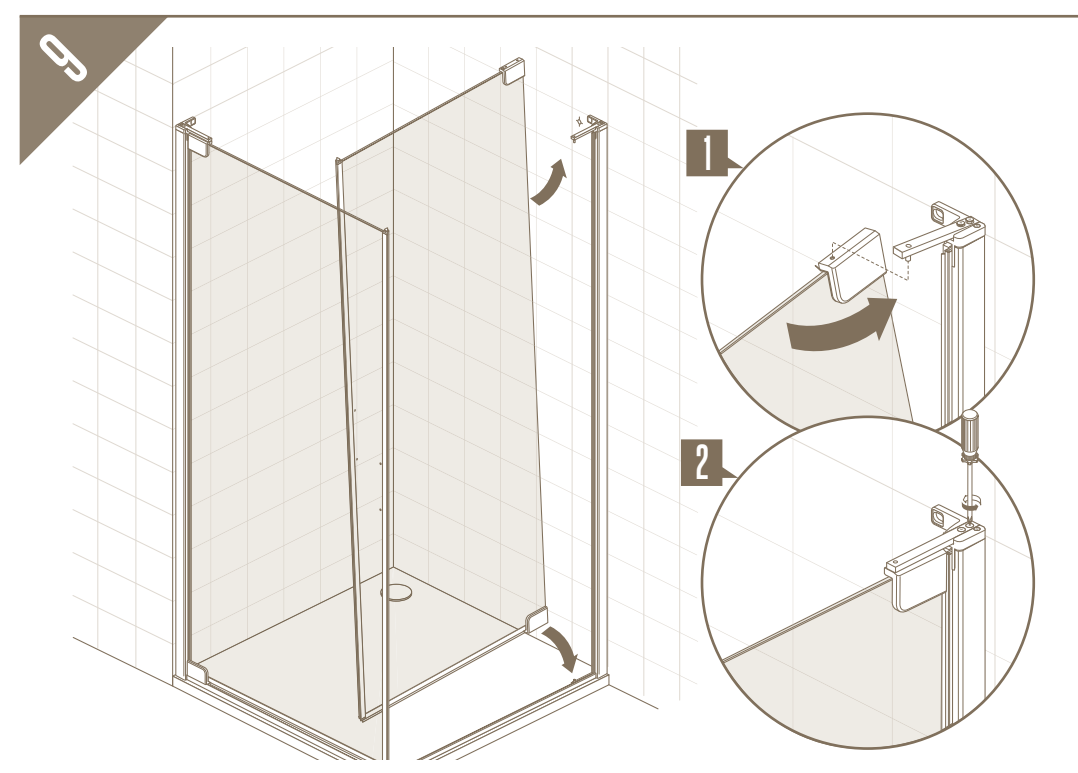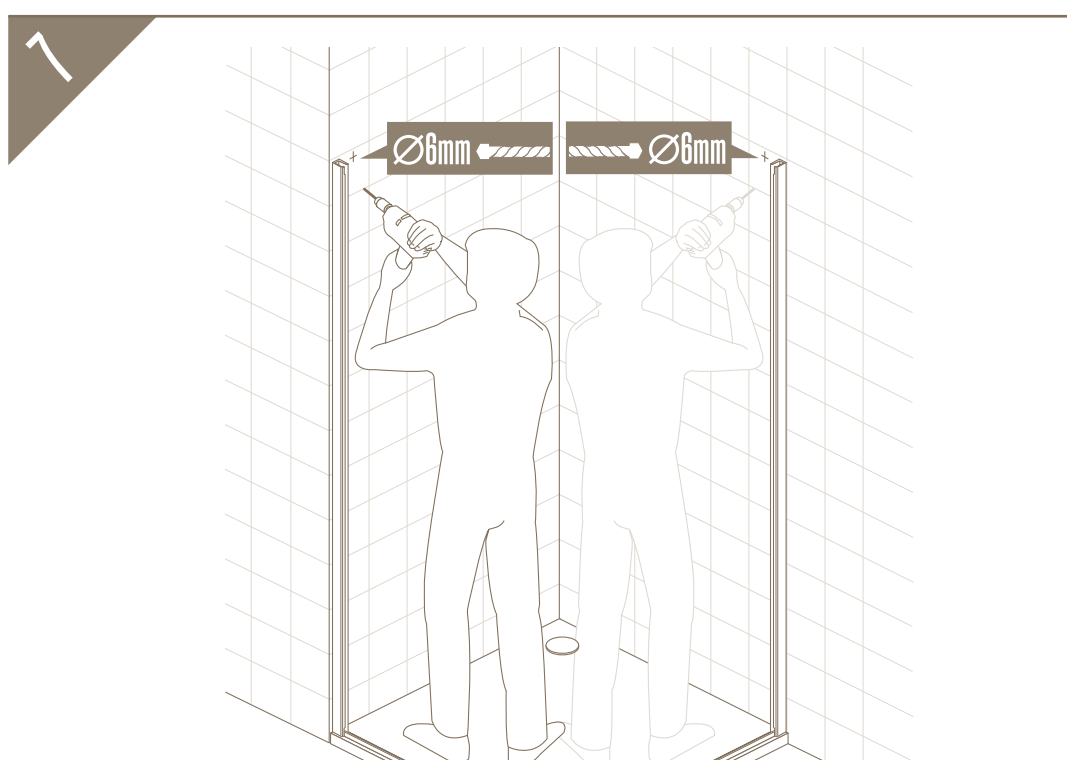


11

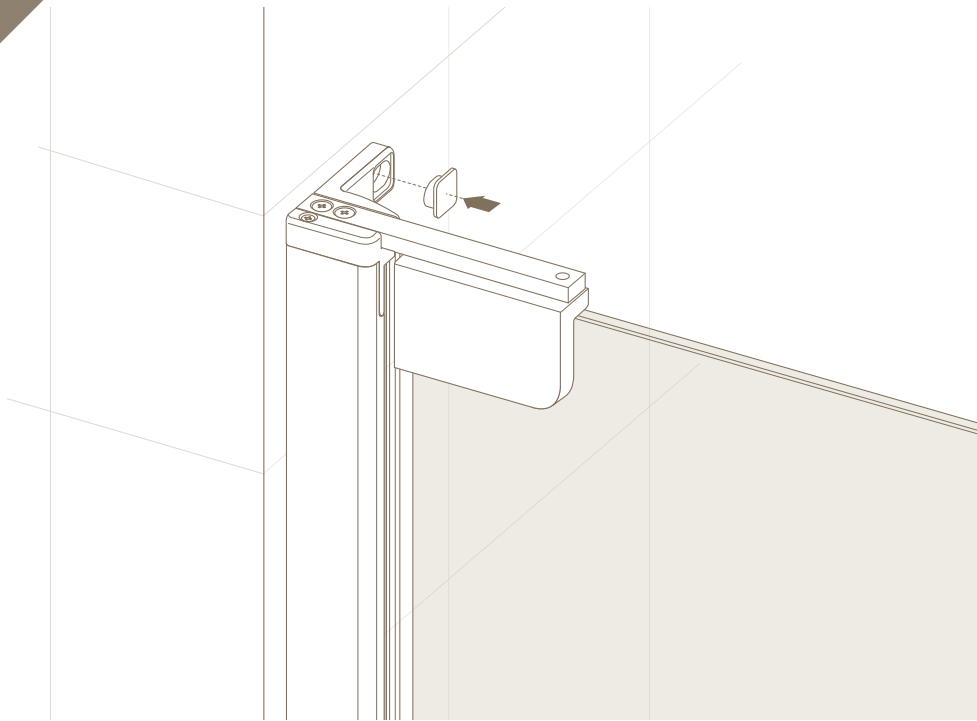

13

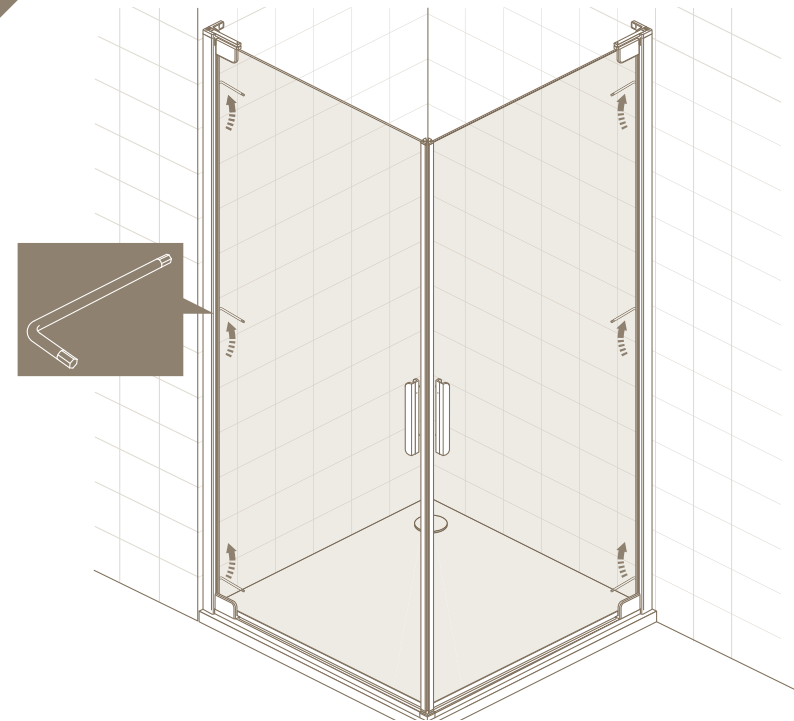

12

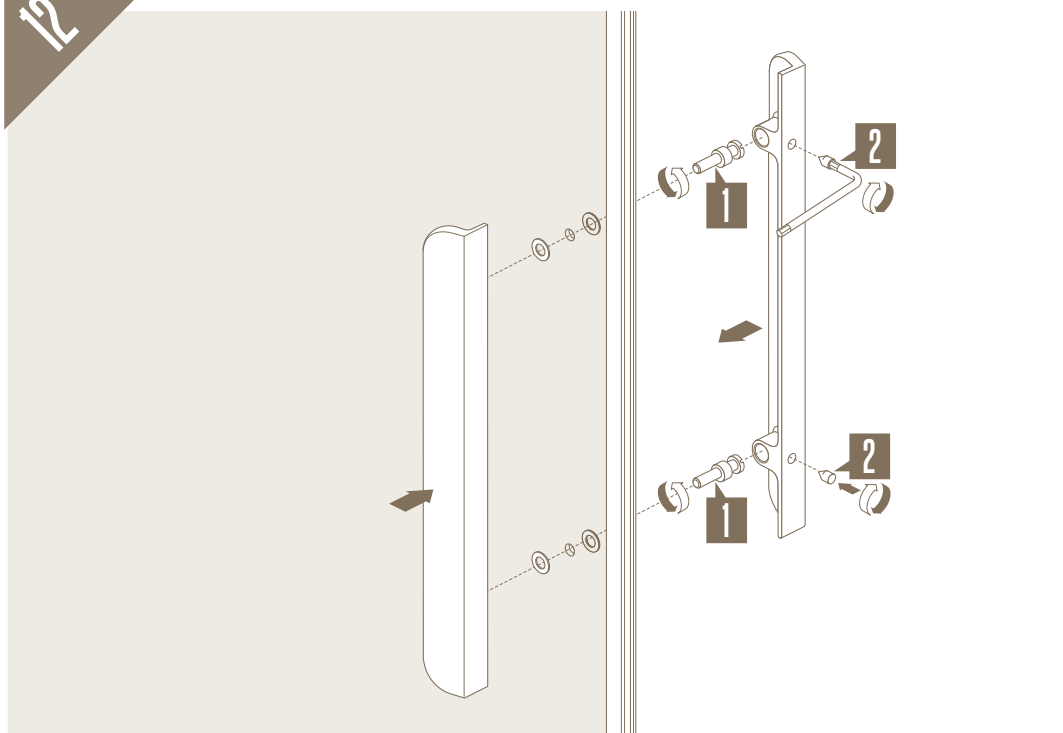

14

Attenzione
 Siliconare solo all'esterno
 Attention
 Siliconer seulement a l'exterieur
 Attention
 Seal only outside
 Attention
 Alleen aan buitenzijde afkitten
 Achtung
 Silikon nur auf der aussenseite
 Atención
 Siliconar solo por el exterior

