


Corin mod. 5690 - 09/12


STEP

Assembling instructions
Notices de pose
Istruzioni di montaggio
Montage voorschrift


5690

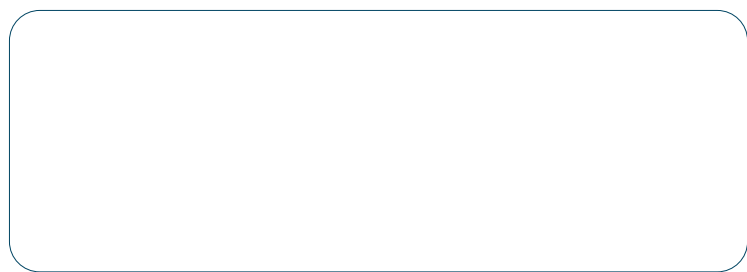

Corin

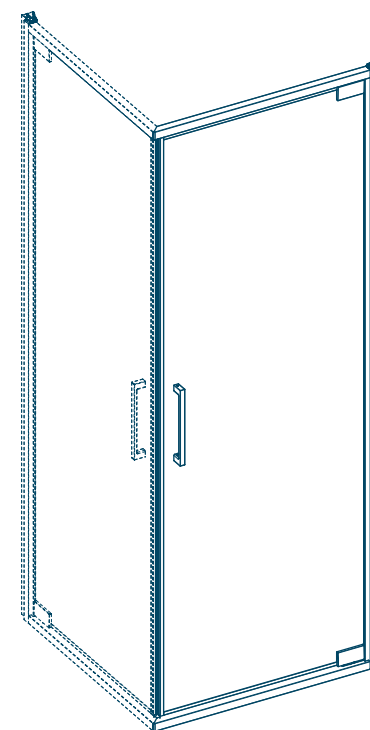


Corin

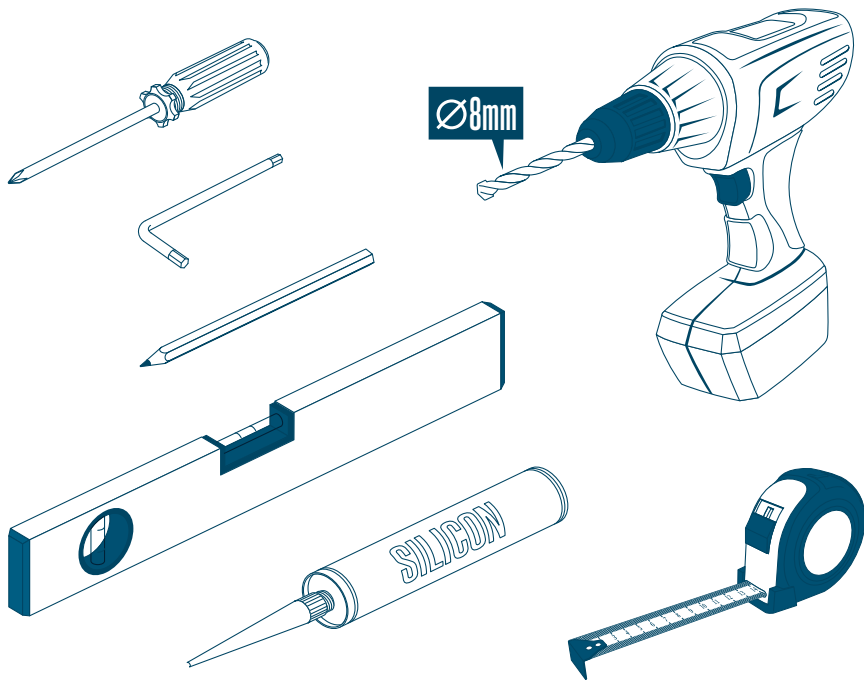


Ø8mm


1

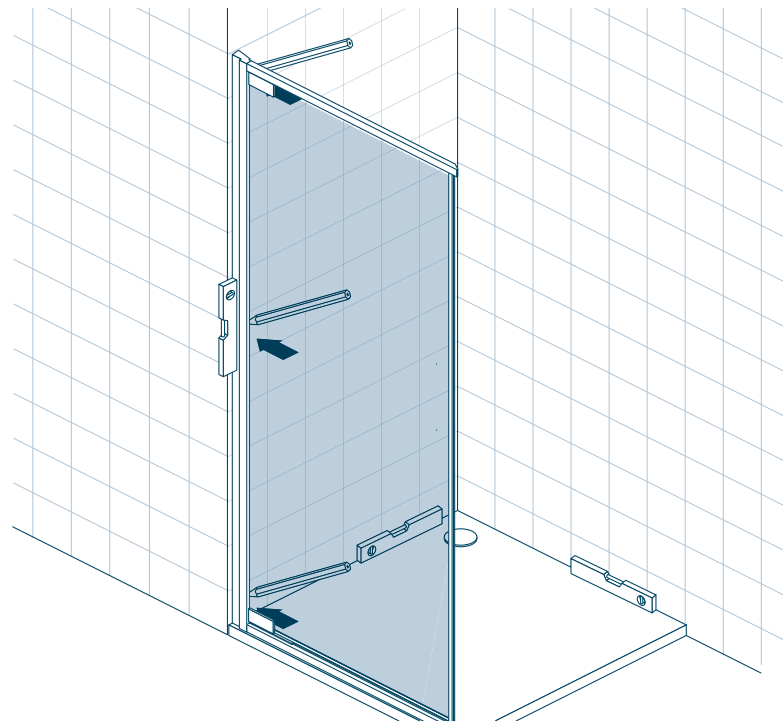





1 side contains

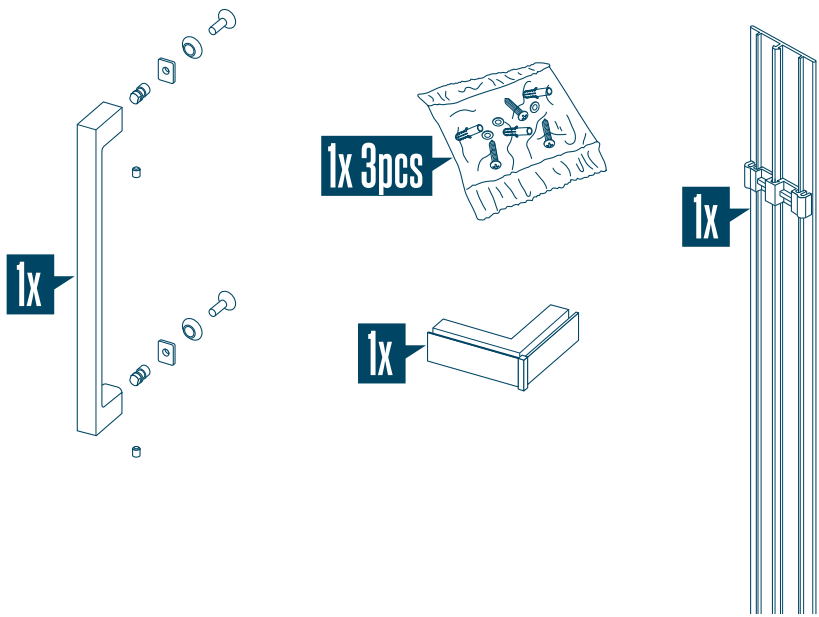


2

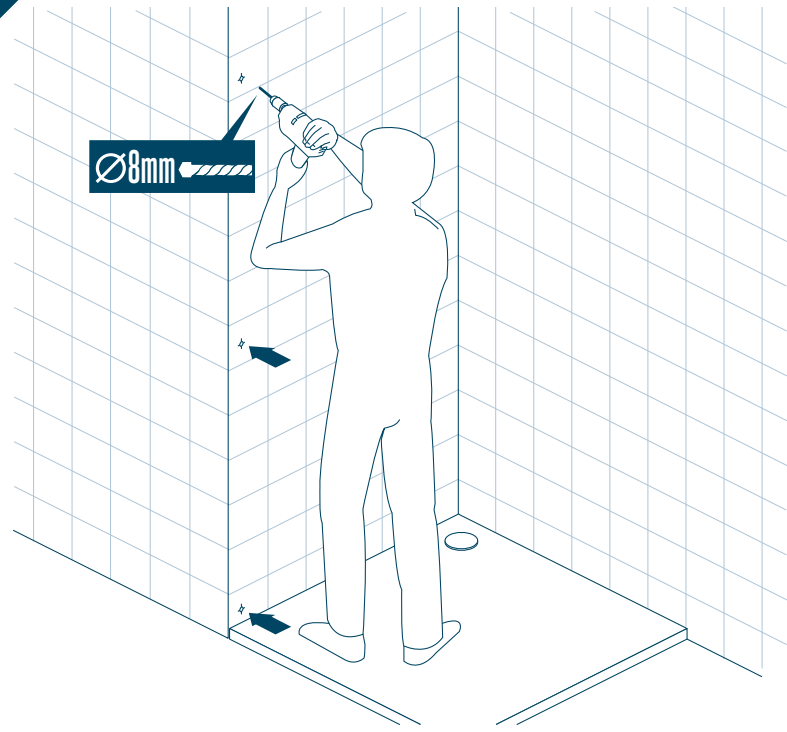


Ø8mm

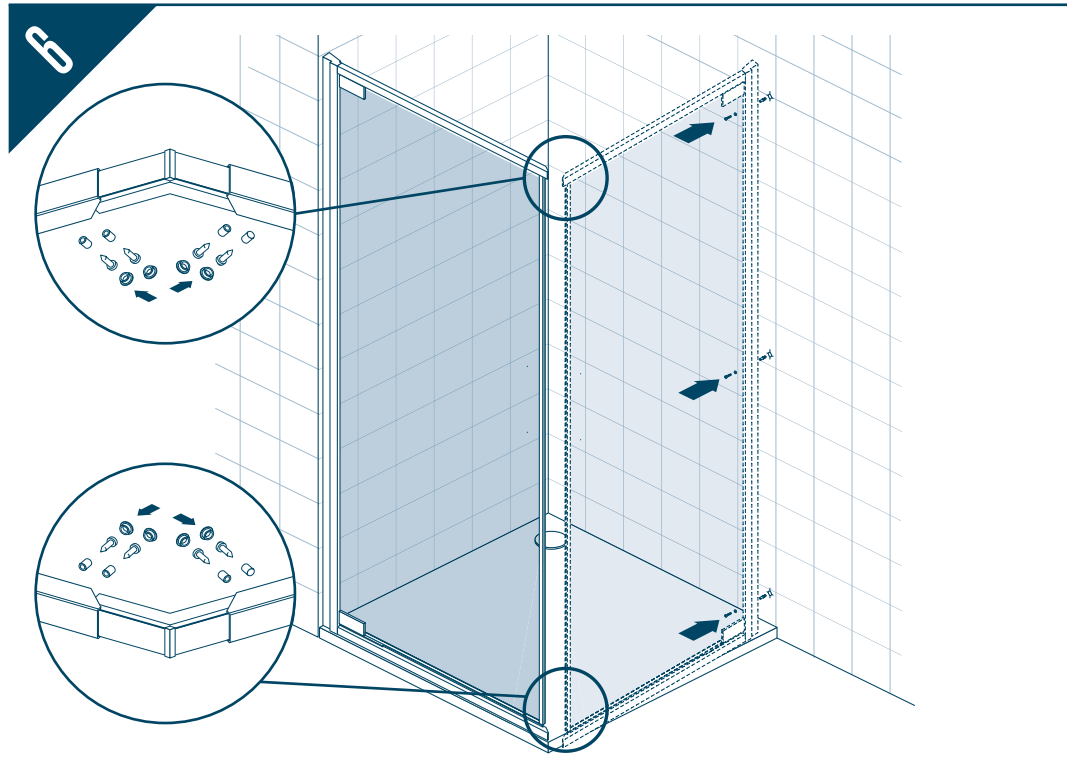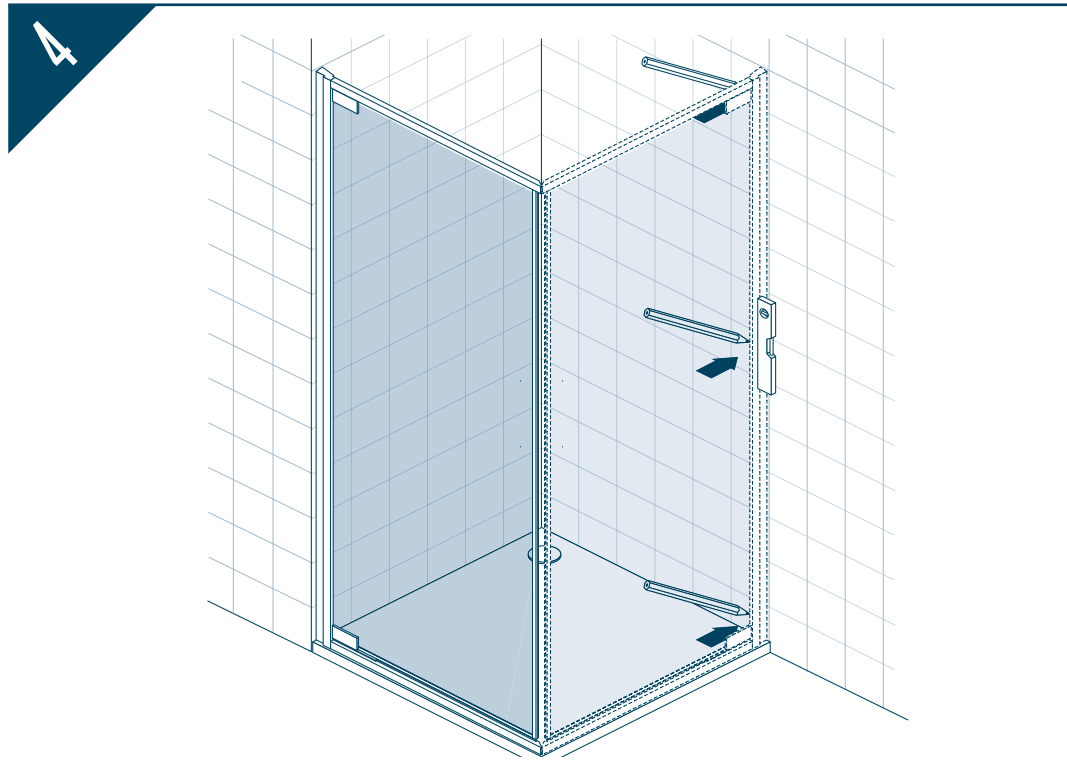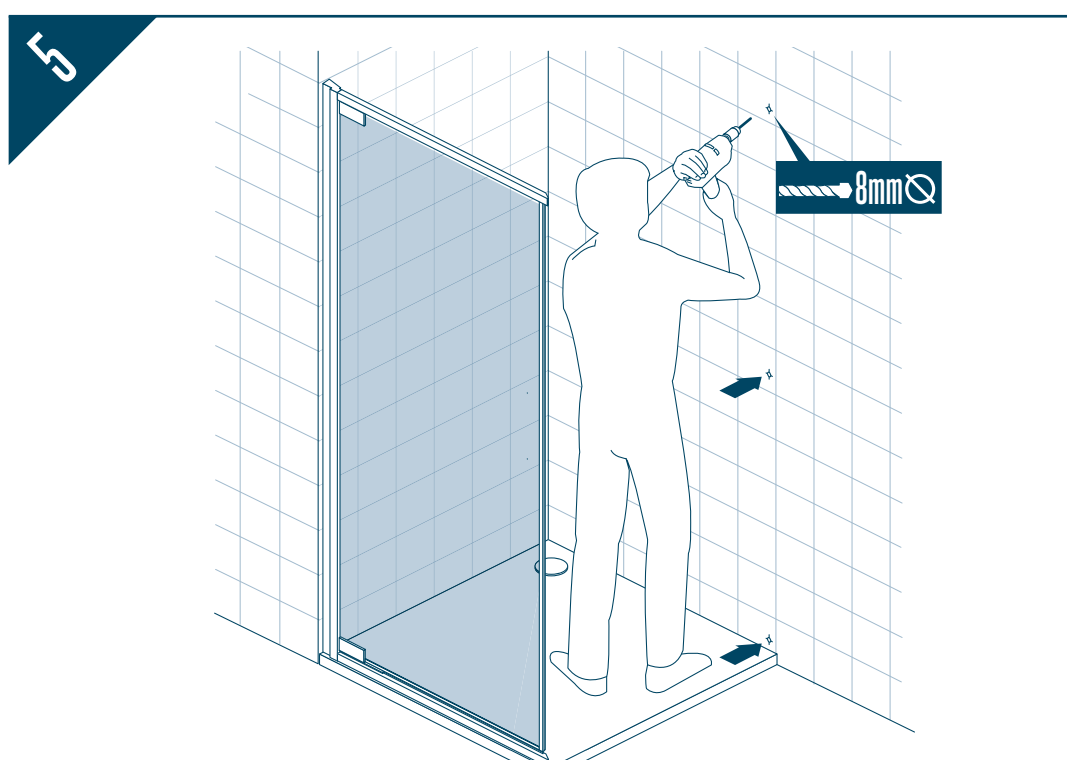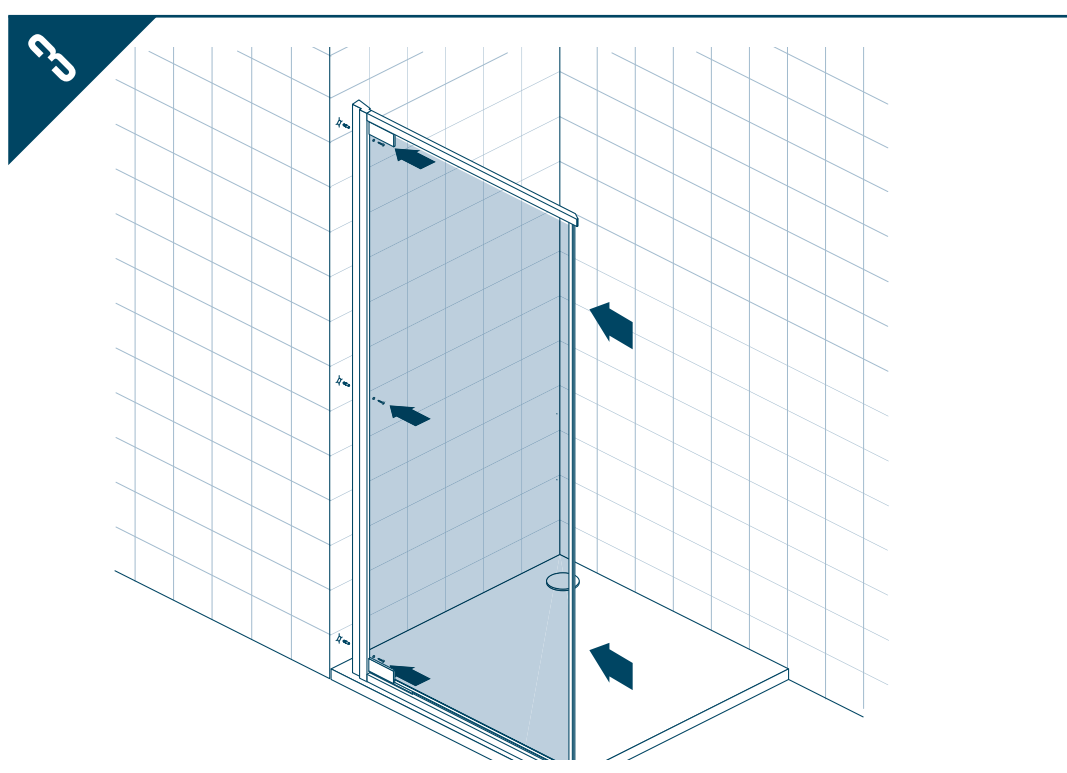


7

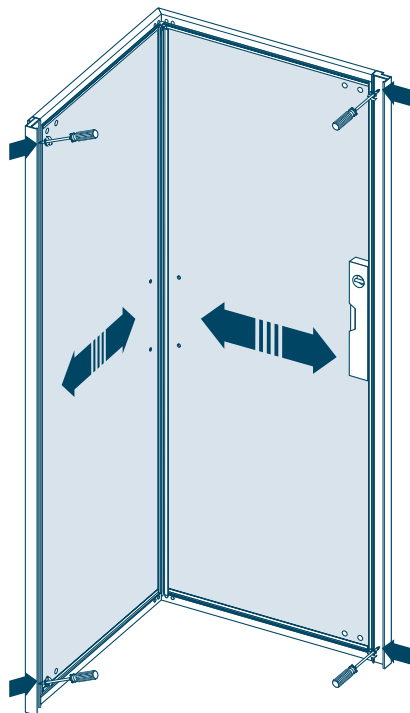

9

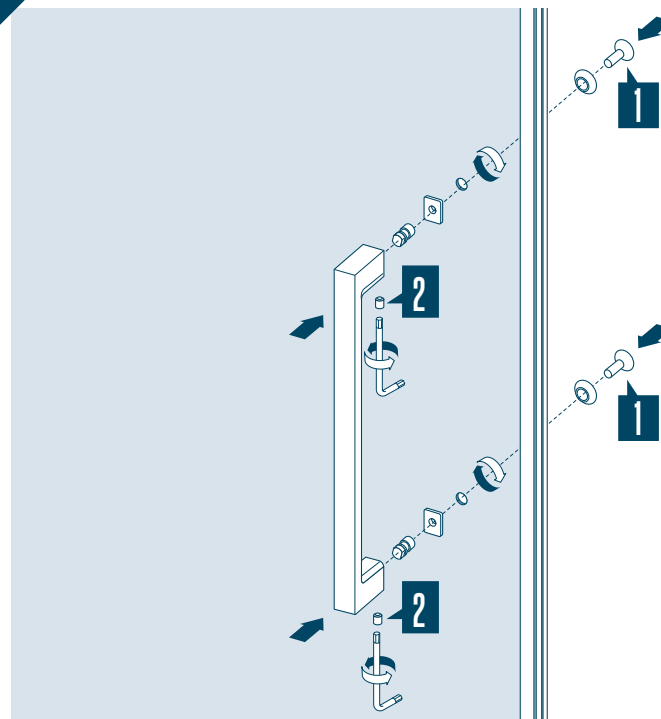

8

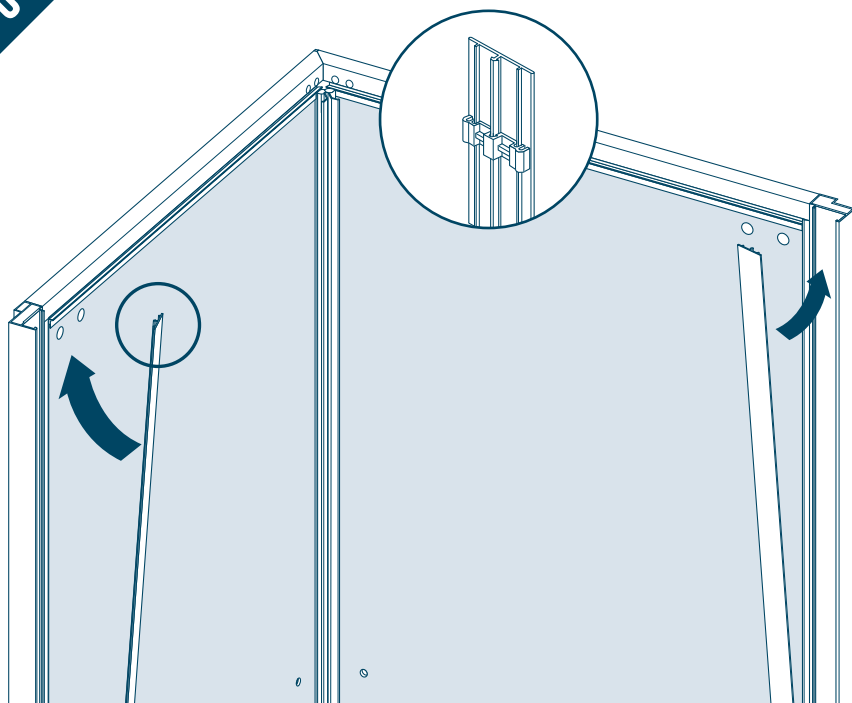

10

Attenzione
 Siliconare solo all'esterno
Attention
 Siliconer seulement à l'extérieur
Attention
 Seal only outside
Attentie
 Alleen aan buitenzijde afkitten
Achtung
 Silikon nur auf der aussenseite
Atención
 Siliconar solo por el exterior

24h

